

Replacing Batteries on your Glass Break Detector



This information is provided so that, for your convenience, you can swap out batteries in a wireless device in your Smart Home Security System.

- 1) BEFORE you start tampering with your device, please call our Monitoring Center at (866)406-5787 to put the system in "test" mode. You will need your password to verify it is you, and not an unauthorized person calling. They will put the alarm in a suspended mode so that your activities will not set off a false alarm.
- 2) Using the below diagrams and instructions, you should be able to open the cover of the device and swap old batteries for new.
- 3) Please call our local office at (865)474-9495 if you have any questions or problems.

Inserting and Replacing the Batteries

To insert or replace the batteries:


- 1 Unwrap the detector.
- 2 Holding the cover and base, twist the cover in a counter-clockwise motion. When the imprinted arrows on the side of the detector are aligned, separate the unit.
- 3 Remove the old batteries.

IMPORTANT: Always dispose and/or recycle used batteries in accordance with the hazardous waste recovery and recycling regulations for your location. Your city, state, or country may also require you to comply with additional handling, recycling, and disposal requirements.

- 4 Insert the batteries in the compartment. Always match the plus (+) sign on the battery with the flat side of the compartment and the minus (-) sign on the battery with the spring side of the compartment.

It takes approximately five (5) seconds for the detector to power ON.

Figure 1 LED Indicators

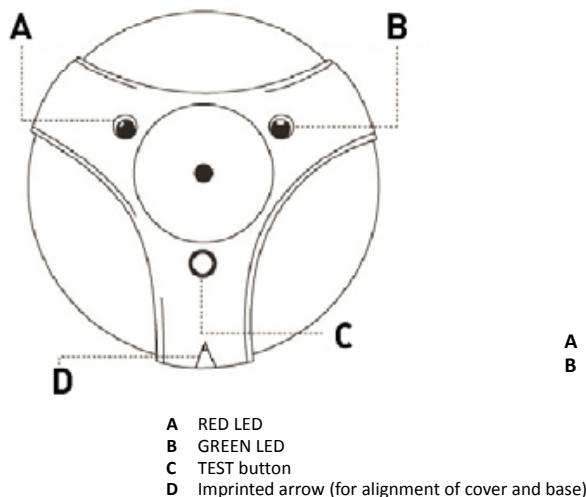


NOTE: If closing the detector when batteries are not present, gently push the RED tabs on the backside of the base away from the detector (see *Figure 2 Glass Break Detector—Base*).

- 5 Holding the cover, align the imprinted arrows on the detector and then twist the cover in a clockwise motion to close the unit.

WARNING: Failure to follow these warnings and instructions can lead to heat generation, rupture, leakage, explosion, fire, or other injury, or damage. Do not insert the battery into the compartment in the wrong direction. Always replace the battery with the same or equivalent type (see "*Specifications on page 2*"). Never recharge or disassemble the battery. Never place the battery in fire or water. Always keep batteries away from small children. If batteries are swallowed, promptly see a doctor.

Figure 2 Glass Break Detector—Base

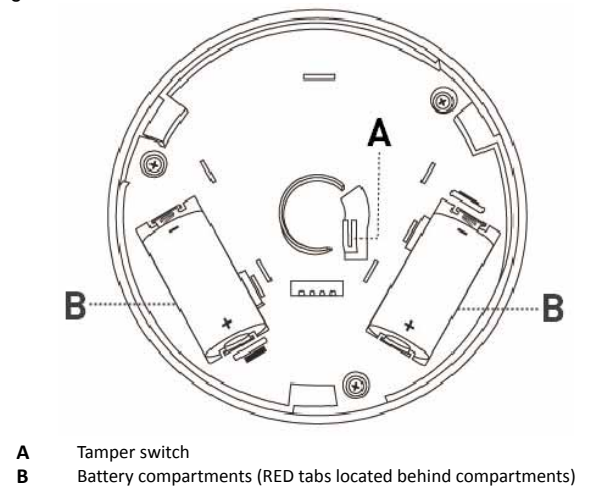

NOTE: Each of these devices requires two 3V lithium batteries. Look, or ask, for CR123A batteries at your favorite store.



"In GOD we trust, all others we monitor."

11426 Kingston Pike • Farragut, TN 37934

(865) 474-9495